USER MANUAL

SYTECH®

When technology turns to art

PORTABLE **DIGITAL RADIO**

SY·1655

WELCOME

Congratulations on the purchase of your new Portable Digital Radio SY-1655. In order to fully benefit from this product please read the following instructions carefully. Store this user manual in a safe place for future references

SAFETY INFORMATION

CAUTION: To reduce the risk of electric shock, do not open the device. Refer all servicing to qualified personnel.

The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.

The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

- Use this apparatus in moderate climates.
-The Marking plate is located at the bottom of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- Do not throw batteries into fire! Respect the environment when disposing of used batteries.
- Batteries should not be exposed to excessive heat such as sunshine, fire or other similar heat source.
- The power plug is used as a disconnect device and must be easily accessible. To be completely disconnected from the power, the plug of the appliance should be disconnected completely. The socket must not be obstructed and should be easily accessible during intended use.
- Under the influence of fast transient and / or electrostatic electric phenomenon, the product may malfunction and the user must perform a power reset of the device

LOCATION AND DESCRIPTION OF CONTROLS

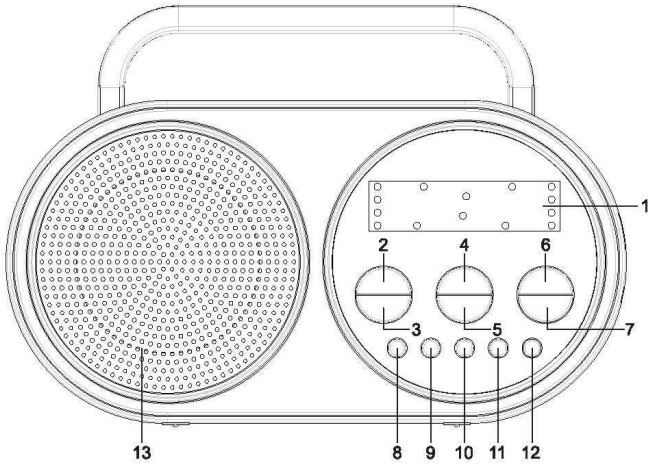

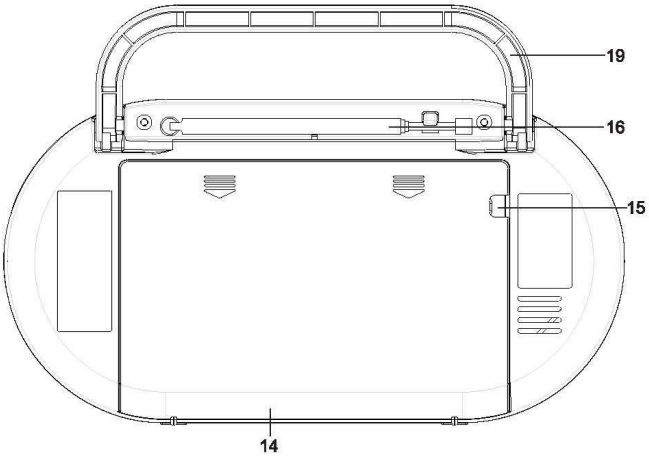

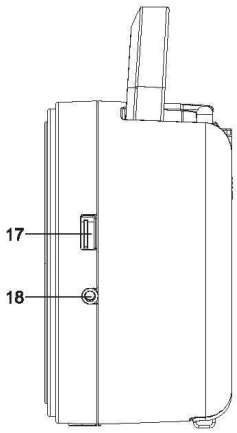

1. LED display

2. To turn unit on/off

SOURCE: To select AM, USB, AUX or FM mode

3. Auto scans and preset radio stations

P.MODE: Playback mode

4. **Button**: To start and pause the playback

5. ■ **Button:** To stop playback.

6. Alarm 1

Volume up

7. Alarm 2

Volume down

8. **SNOOZE:** Interval alarm repetition

Dimmer light intensity of the screen

9. Nap

To fall asleep with the radio, USB or AUX IN

10. Setting the clock

Memory

PROG - Programme

11. **HR.** Hour setting

Setting down

12. **MIN.** Minute setting

Setting up

13. Speaker

14. Battery & AC cord compartment

15. AC Power Cord

16. FM telescopic antenna

17. USB port

18. AUX IN jack

19. Carrying handle

POWER SUPPLY

AC: 230V ~ 50 Hz (CE)

DC: 4x1.5V, battery type R14/ UM-2/”C” size (not provided)

For optimal performance, the use of alkaline batteries are recommended. These batteries must be replaced every six months.

1. Insert the plug of the power cord into a standard wall outlet.

2. Install the batteries in their corresponding compartment. Use only the size and type of batteries specified .Respect the polarity indicated in the compartment. Improper polarity can cause damage to the device. Do not attempt to recharge the batteries, they can catch fire or explode. The batteries need to be replaced when: The volume decreases, or sound is distorted during operation.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Note:

-When the unit is powered by DC, if no button is pressed within 8 seconds, the display light will turn off in order to save the battery life.

-The AC cord must be unplugged from the power outlet for the unit to run on the batteries (DC power)

- When the set is connected to the mains, the power source automatically switches to AC.

SETTING THE TIME

1. In standby mode, press and hold the button, the display will flash, set the time with **HR.** (hour) and/or **MIN.** (minutes).

2. Press again to confirm.

NOTE:

- If during the adjustment time no key is pressed during 9 seconds, the current display will automatically be stored.

TURNING UNIT ON/OFF

In standby mode, press once to turn on the unit. Press and hold for 2 seconds to turn off the unit.

LISTENING TO THE RADIO

Selecting the band

When the unit is ON, press the **SOURCE** button repeatedly to select FM or AM mode. The corresponding indicator lights up.

Manual search

1. Choose your radio station using the buttons or .

2. Adjust the volume by using the buttons or to the desired level.

3. To stop listening to the radio, press and hold the button for 2 seconds to turn off the unit.

NOTE: The FM radio station supports 0.05MHz, so when you choose the FM radio station "87.55" ,the display will only show "87.5" and the decimal point "." will blink at the same time.

Automatic search

Press and hold for a few seconds the or buttons. The automatic search locates all the strong stations in range and sets them automatically. A station with a weak signal can be set manually by repeatedly pressing the or buttons.

NOTE: During the search operation, the sound level is automatically muted.

To enhance radio reception ability:

FM: Extend the telescopic antenna.

AM: Rotate the unit horizontally for optimum reception.

Preset stations

This unit can store 10 FM and 10 AM stations.

Manual storage:

1. Select a radio station manually or in automatic search.

2. Press and hold the button until "P 01" blinks on the screen.

3. Press the button to select a channel.

4. Press Ⓜ to save it.

5. Repeat steps 1-4 to store other stations.

Automatic storage:

Press and hold for a few seconds the buttons and the unit will automatically save the first 10 FM stations or 10 AM stations.
NOTE: When you store over a channel which has already been preset, the previous station will automatically be cleared and replaced by the new station.

Listen to station presets

Press the button and repeat the operation as many times as necessary to select your station.

Press the + or − buttons to adjust the sound level.

SETTING THE ALARM AND THE ALARM MODE

1. In standby mode, press and hold the 1 button for a few seconds. The display will begin to blink.
2. Press the **HR.** and/or **MIN.** buttons to set the time of wake up.
3. Press the 1 button and then press the ◄◄ or ►► buttons to select the source of wake up bb buzzer, USB or FM/AM radio.
4. Press the 1 button to confirm, the alarm indicator 1 lights up.

Note: Same procedure applies for Alarm 2 with except using the 2 button.

Note: - The previous level of volume is stored; the volume of the alarm will be identical. If you wake up with the radio, do not forget to check the volume level as this may vary.

Press the ⏻ button once to turn on the unit. Adjust the volume with + or −. Then press and hold the ⏻ button for 2 seconds to turn off the unit.

-If you use the sleep mode with a low volume level, you should use the buzzer to wake you up instead.

-If an incorrect or damaged USB is used, the wake up mode it will change to the buzzer alarm automatically.

-The unit will stop playback at the end of the track when in USB mode. Then it will automatically switch to standby after approx. 10 minutes without prior warning.

-The alarm is programmed to run for 60 minutes.

STOPPING THE ALARM

Alarm repetition

Press **SNOOZE**. The alarm stops and will sound again 9 minutes later.

Alarm stop

Press the ⏻ or 1 buttons. The alarm will go off again the next day at the same time.

Alarm Cancellation

In standby mode, press the 1 button to cancel the alarm permanently. The alarm indicator lights off.

Note: Same procedure applies for Alarm 2 except with the 2 button.

SLEEP FUNCTION

To fall asleep in ON mode press the button to select 120-90-60-30-15-10 or 5 minutes of listening. The Indicator will light up once it has been selected. The unit will automatically turn off after the specified time. To cancel the sleep function, press or to turn the function OFF.

NAP FUNCTION

This function wakes you up after a short period of time. Only the buzzer may be selected in this case.

1. In standby mode, press to select 120-90-60-30-15-10 or 5 minutes for your nap. The indicator lights up on the display once the time has been selected.

2. To stop the alarm, press the or buttons.

3. To cancel the function, press repeatedly until “OFF” is displayed on the screen.

LISTENING TO MUSIC FROM A USB DEVICE

To insert a USB device (not included)

Connect your USB device to the USB port, press the **SOURCE** button repeatedly to select the USB mode. The word USB will blink on the display and you may now playback the music through the SY-1655

Basic player functions

Play/Pause: press ▶II to pause momentarily the track playback. Press ▶II again to resume playback.

Setting Playback Mode: Repeatedly press the **P.MODE** button to select the desired mode in the following order: “ONE”(repeat one) -> “FLD”(repeat folder) -> “ALL”(repeat all) -> “RND” (random playback) -> “OFF“ (cancel the setting) .

Changing track: While playing, press the ►► or ◄◄ buttons to go to the next or previous tracks respectively.

Stop: Press the ■ button to stop the playback. The display will show the number of the all the tracks on your USB device.

Note: When the total number of tracks on the USB device exceeds 2999, the display will blink “2” instead of showing the number of total tracks.

PROGRAMMED PLAYBACK

Programmed playback enables tracks to be played in any desired order. Up to 20 tracks can be programmed on the SY-1655.

1. Press the **PROG.** Button, and the **PROG.** Indicator will light up.
2. Press the ►► or ◄◄ buttons to select the desired track number. Then, press the **PROG.** button again to memorize the selected track.
3. Repeat steps 1-2 until all desired tracks are programmed (Max. 20)
4. Press the ▶II button to start playback. The tracks will now be played in the order selected.
5. To cancel the program function, press the ■ button twice or press the button to switch off the unit.

Note: Programming can only be made when the player is in stop mode.

Exit USB mode

To exit the USB mode, disconnect your USB device from the unit or repeatedly press the **SOURCE** button to switch into other modes.

Note

**** There are many USB devices in the market. We cannot guarantee that the unit will support all the different models. Please try another USB device if yours is not supported.***

**** The unit might not support all the multimedia files stored in USB because it includes some special playback procedures which might not be compatible with the procedures of this unit.***

CONNECTING AUX SOURCE

1. Connect your external music device (e .g. mp3 player) to the **AUX IN** jack on the right side of unit (cable not included).
2. Press the **SOURCE** button repeatedly to select the AUX mode. “AU” will appear on display.
3. Start the playback from your external music device.
4. Adjust the volume to desired level.
5. To stop the playback, disconnect your external music device from the **AUX IN** jack.

DIMMER

Press the button to select the brightness of the screen: high, low or OFF.

AUTOMATIC STANDBY MODE

When in USB or AUX IN mode, the unit automatically switches to standby mode after approx. 10 minutes without any prior warning. To switch the unit on again, please follow the instructions mentioned in this instructions manual.

TECHNICAL SPECIFICATIONS

POWER SUPPLY: AC 230V~50Hz, 4W consumption
DC 6V 4x1.5V, battery type R14/UM-2/ “C” size (not provided)
RADIO: FM 87.5-108MHz
AM 522-1620kHz

COMPATIBLE FORMAT USB: MP3. (32-320KBPS)
CAPACITY: 256MB – 32GB.
DIMENSION: 230(L) x 83(W) x 120(H) mm

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.
Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Portable Digital Radio
Sytech® SY-1655 complies with the following directives:

EMC Standards: Directive 2004/108/EC

LVD Standards: Directive 2006/95/EC

ROHS Standards: 2011/65/EC Restriction of Hazardous Substances

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator